

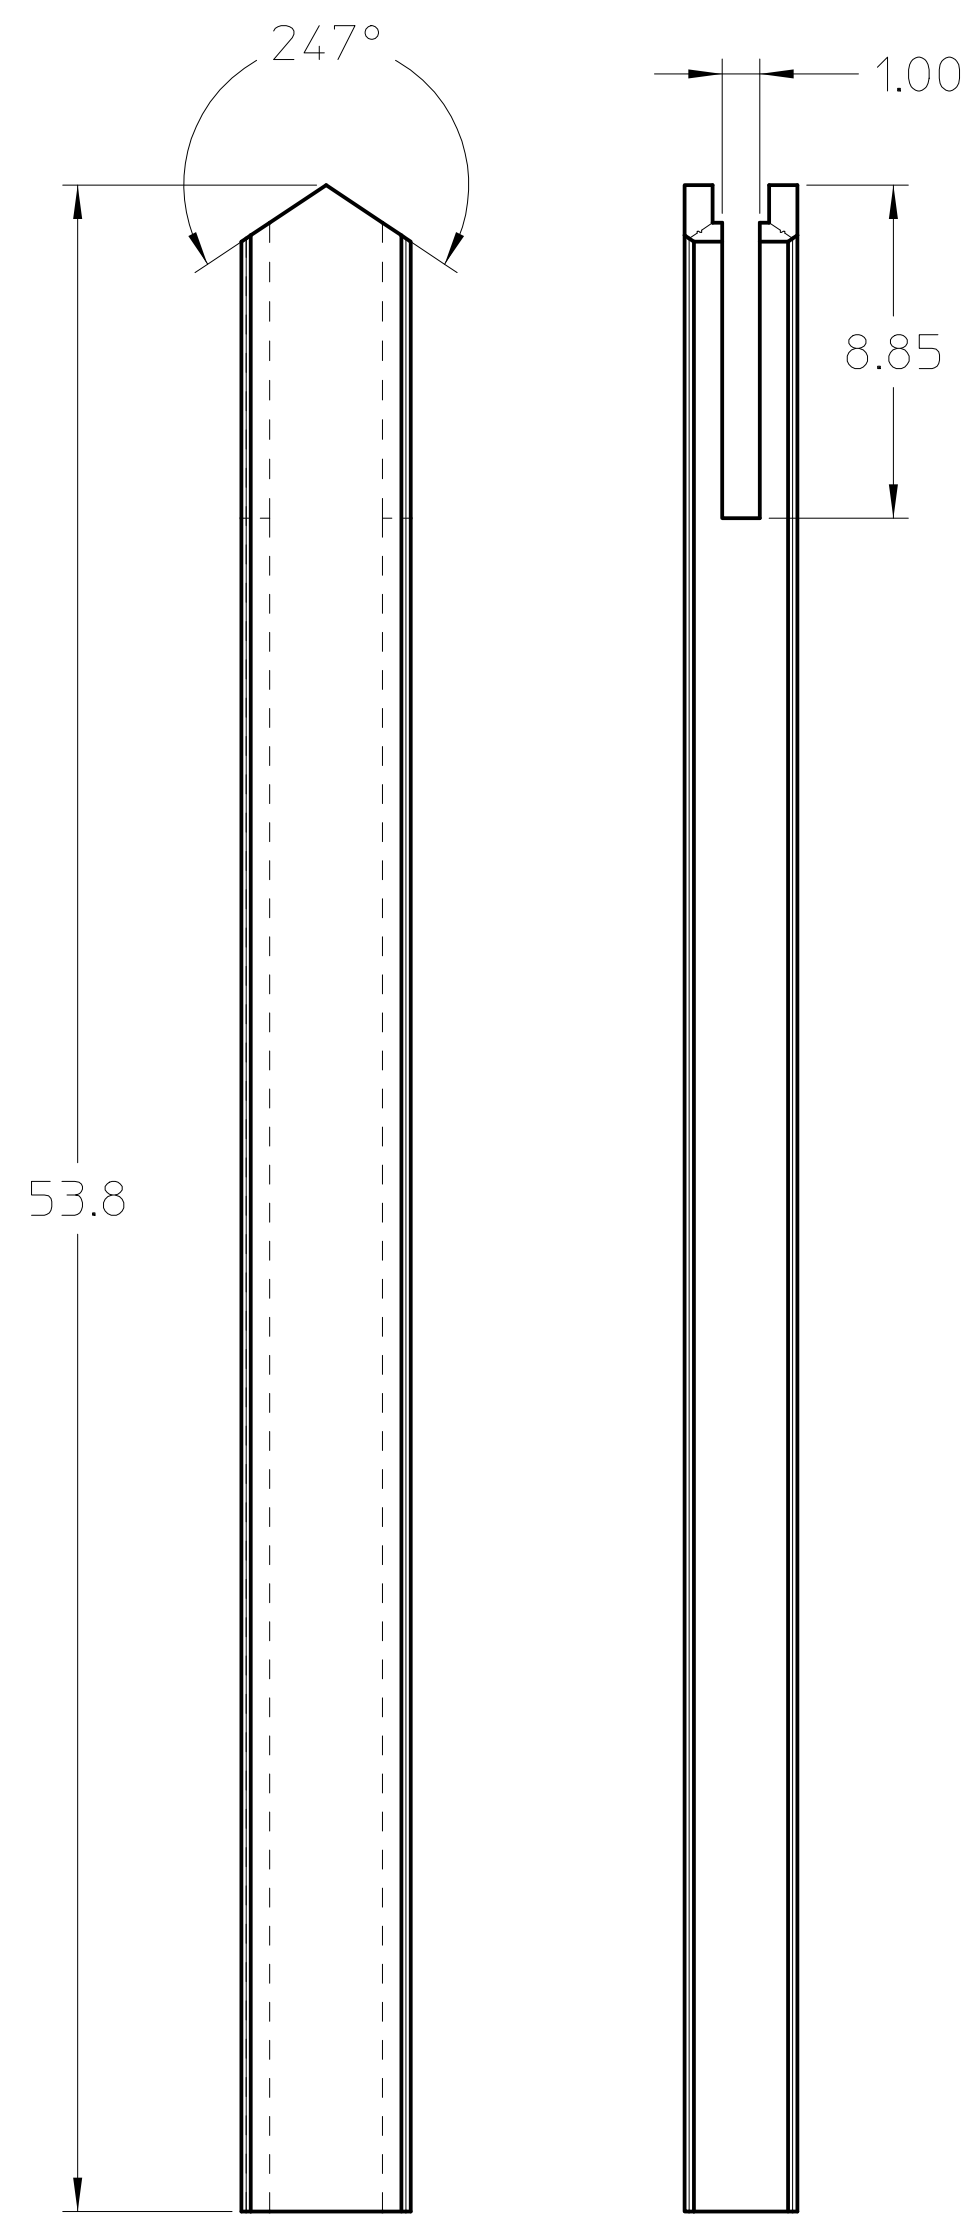
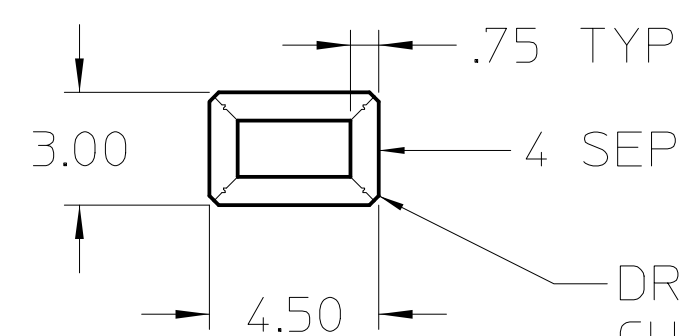


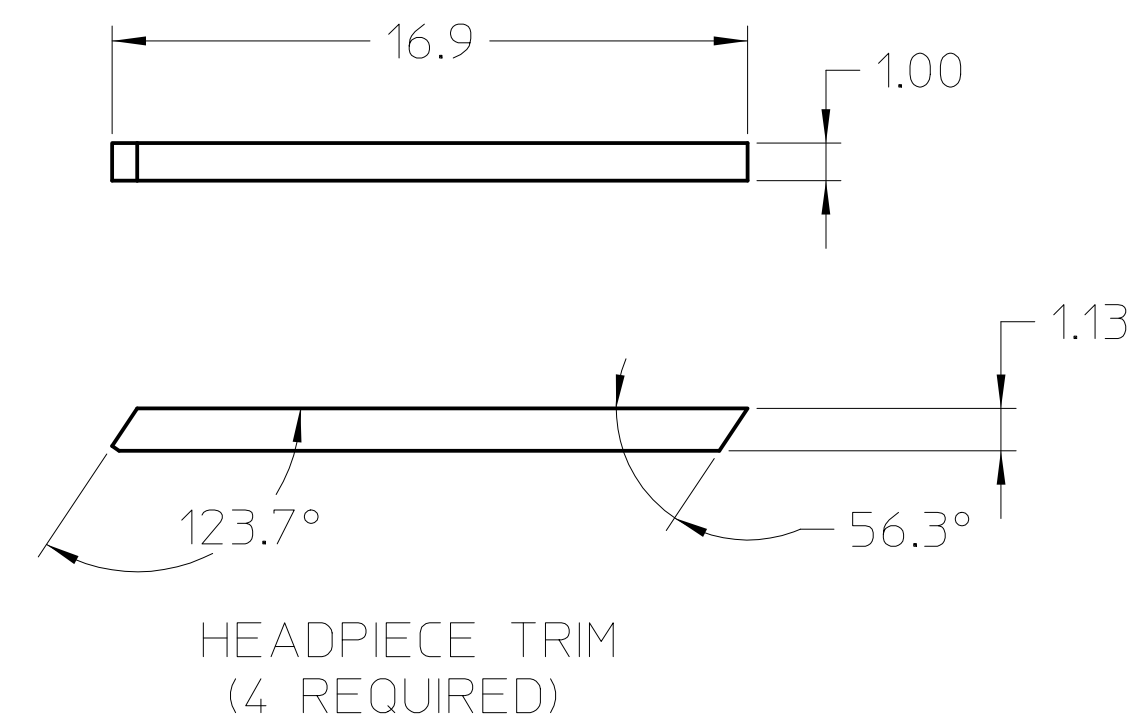


I RECCOMEND CUTTING THE HEADPIECE AND ADDING TRIM PIECES PRIOR TO CUTTING ANGLE AND NOTCH IN COLUMN. THESE DIMENSIONS CAN BE ADJUSTED AS NEEDED.

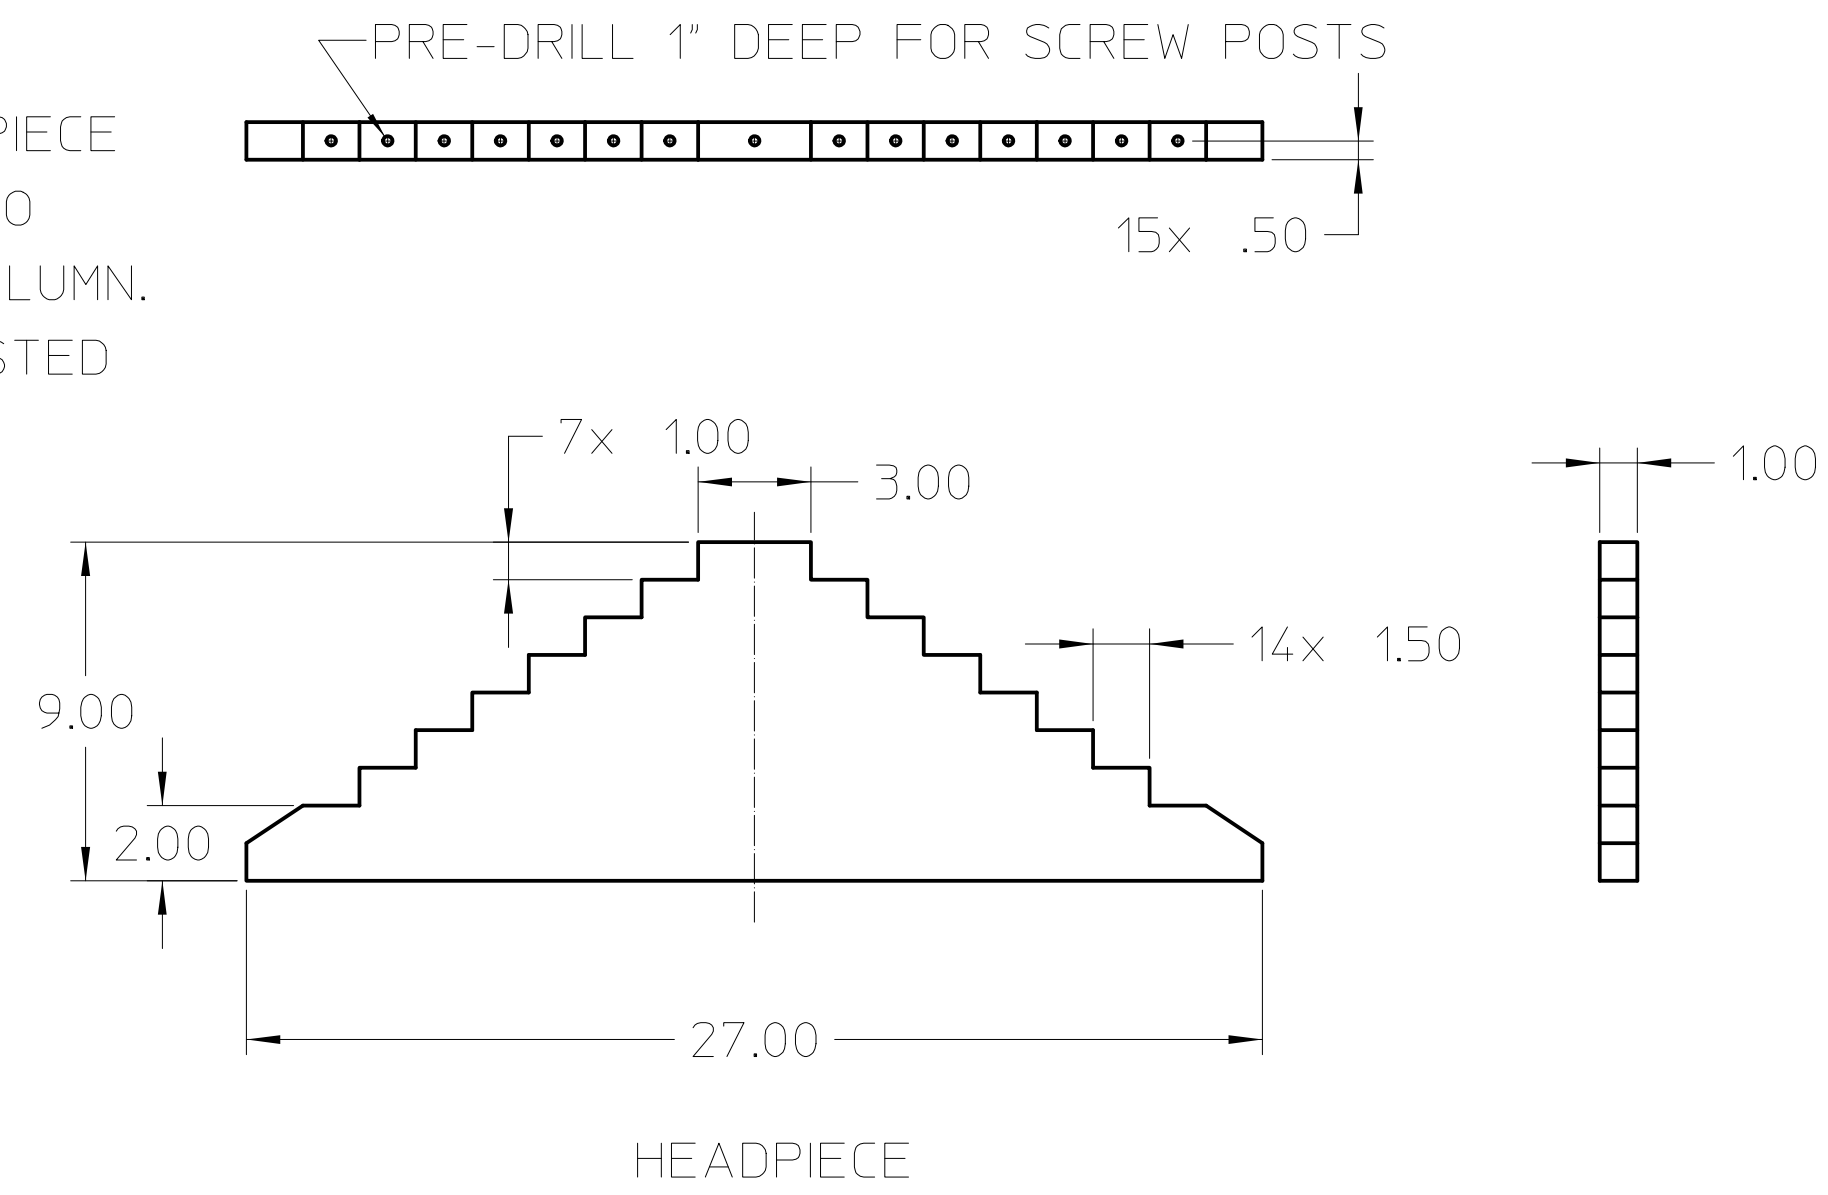


DRY-FIT THE FOUR SIDES THEN ROUTE A 45° CHAMFER ON EACH EDGE. ONLY DRY-FIT, FEET MUST BE ASSEMBLED TO POST SIDES PRIOR TO GLUE-UP.

COLUMN

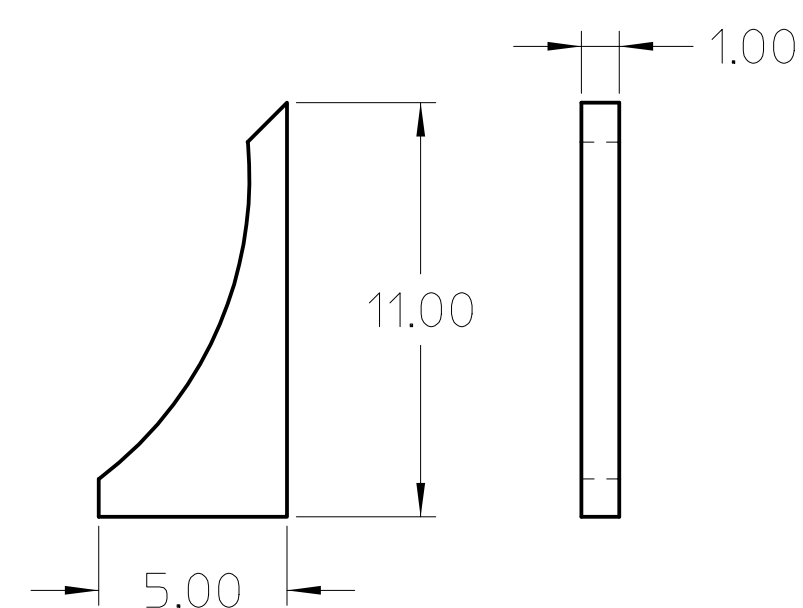


FOOT BRACE

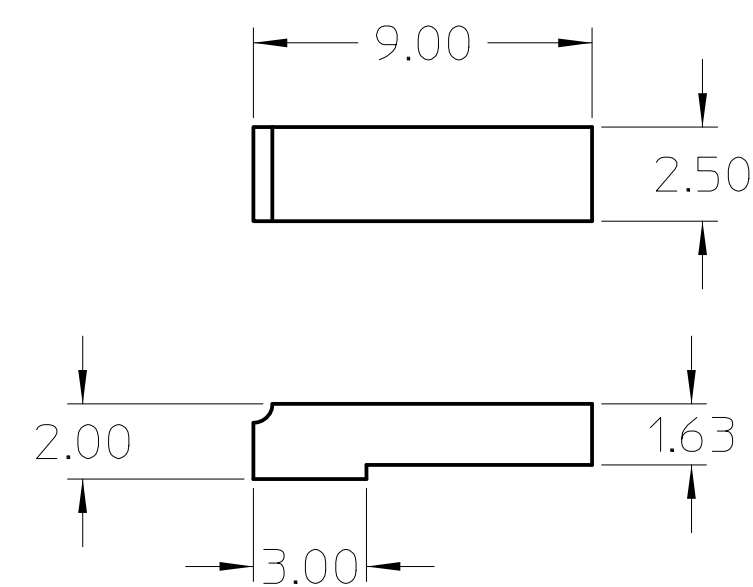

FOOT

I GLUED & SCREWED THE FOOT TO THE BRACE FIRST, THEN I GLUED & SCREWED THAT ASSEMBLY TO A SIDE. THIS HAS TO BE DONE BEFORE THE LOCK MITER JOINT HAS BEEN GLUED.

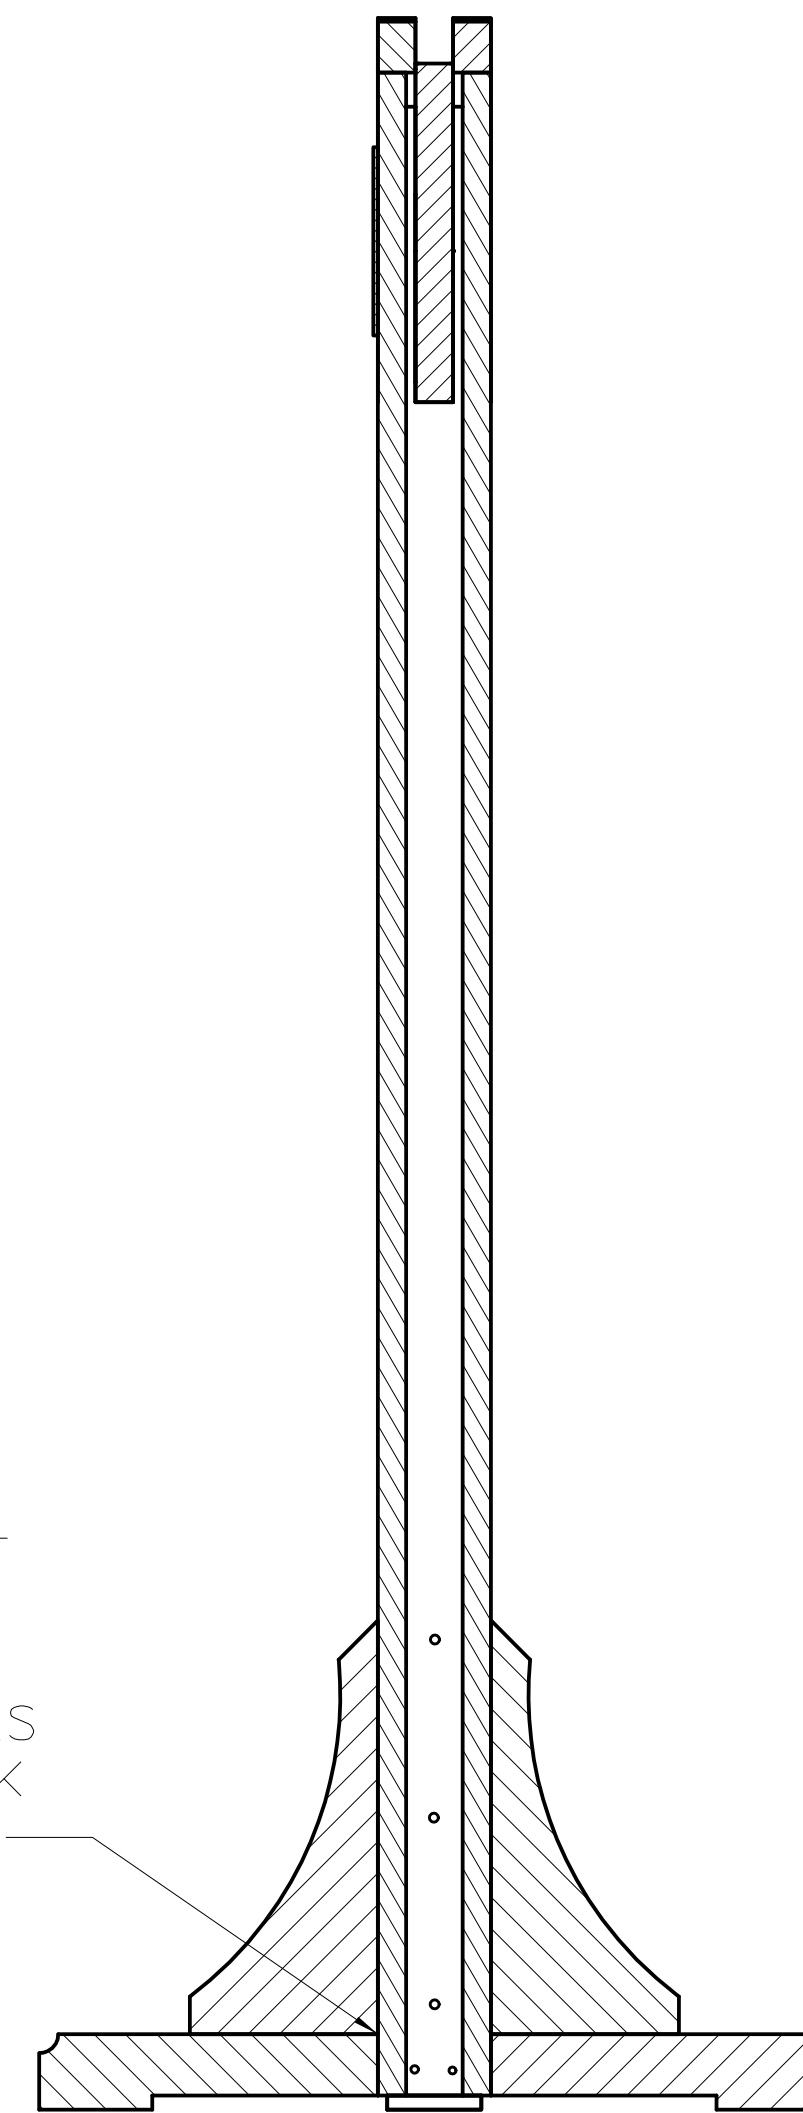

SECTION A-A

